

5753015

### Display Covers

Manufactured of high quality crystal clear polycarbonate. Utilize counter space to its best advantage with maximum display and easy service.

### Standard Covers

- 5751410 12" x 20" x 4" polycarbonate cover
- 5751440 12" x 20" hinged cover only
- 5751470 18" x 26" x 4" polycarbonate cover
- 5751380 18" x 26" x 4" center hinged polycarbonate cover

### Dome Covers

- 5751260 12" x 20" dome cover
- 5751290 18" x 26" dome cover

### The Gourmet Covers

This classic styling makes an eye-catching acrylic display.

- 5751015 10" clear round gourmet cover
- 5753015 10" clear shallow tray
- 5753016 10" clear round deep tray
- 5750840 12" clear round gourmet cover
- 5751020 12" clear round shallow tray
- 5751080 12" x 3.5" clear round deep tray
- 5750870 15" clear gourmet cover
- 5750520 15" clear round shallow tray
- 5751090 15" x 3.5" clear round deep tray

### Turn N Serve Covers

- 5753010 10" turn n serve gourmet cover
- 5750490 12" turn n serve gourmet cover
- 5750525 15" turn n serve gourmet cover

### Display Cabinets

- 5752960 Knock down display cabinet slant front and rear door w/ three 10" x 14" trays, 21 lbs
- 5751963 Knock down display cabinet w/slant front, rear door and self-serve front door with three 10" x 14" trays, 21 lbs
- 5753945 Acrylic food bin - 12.5" x 12.5" x 12.5"

### Specialty Acrylic

- 1800384 Revolving condiment and lid organizer, clear acrylic, 10.5" x 9" x 14.5"
- 5750267 Tong kit, includes tong, chain, hook & tape
- 5750513 8.5" x 11" clear easel
- 6450062 Acrylic bakery order board, 2 rows of 4 each 4.875" x 5", 20" x 21" overall



5751410



5753945




5752960

(assembly required)



5750267

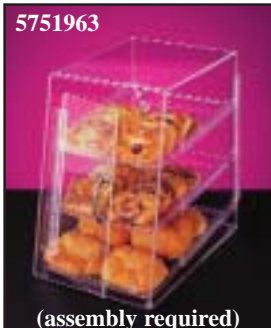

5751963

(assembly required)



6450062



1800384



5750513